

パーツ No.	MX-6S	MX-7S	MX-21S	MX-3.5S	MX-28S	MX-14S	MX-18S	MX-24S
Q 3	2SC 2053	2SC 1959	2SC 1959	2SC 1959	2SC 1959	2SC 1959	2SC 1959	2SC 1959
X 1	12.9922 MHz	9.1899 MHz	16.2670 MHz	14.8370 MHz	13.2775 MHz	12.7640 MHz	14.6990 MHz	12.0747 MHz
X 3	11.2720 MHz	11.2720 MHz	11.2750 MHz	11.2720 MHz	11.2750 MHz	11.2750 MHz	11.2750 MHz	11.2750 MHz
D 31	1S1588	1S1588	N C	1S1588	N C	N C	N C	N C
D 33	ジャンパ	"	1S1588	"	1S1588	1S1588	1S1588	1S1588
CH 2	100	330	330	331	330	330 μH	33 μH	330 μH
CH 3	"	"	"	"	"	330 "	33 μH	330 μH
CH 4	"	"	"	"	"	330 "	33 μH	330 μH
TC 2	トリマ	470 P	トリマ	470 P	トリマ	トリマ	トリマ	トリマ
TC 3	"	440 P	"	680 P	"	"	"	"
TC 4	"	300 P	100 P	N C	68 P	68 PF	22 PF	100 PF
TC 5	"	330 P	220 P	560 P	100 P	350 PF	82 PF	220 PF
R 21	330 Ω	330 Ω	330 Ω	100 Ω	330 Ω	330 Ω	330 Ω	330 Ω
R 22	"	N C	N C	330 Ω	330 Ω	330 Ω	330 Ω	N C
R 24	22 Ω	51 Ω	51 Ω	51 Ω	51 Ω	51 Ω	51 Ω	51 Ω
R 26	220 Ω	100 Ω	100 Ω	100 Ω	100 Ω	100 Ω	100 Ω	100 Ω
R 42	2.7 K	2.2 K	2.2 K	2.2 K	2.2 K	100 Ω	100 Ω	100 Ω
R 44	330 Ω	220 Ω	220 Ω	220 Ω	220 Ω	2.2 kΩ	2.2 kΩ	2.2 kΩ
R 81	N C	1 K	1 K	1 K	1 K	220 Ω	220 Ω	220 Ω
R 83	"	N C	"	N C	"	1 kΩ	1 kΩ	1 kΩ
R 84	ジャンパ	ジャンパ	ジャンパ	180 Ω	ジャンパ	1 kΩ	1 kΩ	1 kΩ
C 10	33 P	103	103	103	103	ジャンパ	ジャンパ	ジャンパ
C 13	N C	10 P	N C	10 P	N C	103	103	103
C 14	100 P	100 P	47 P	100 P	100 P	6 PF	N C	N C
C 15	30 P	220 P	100 P	"	30 P	100 PF	ジャンパ	ジャンパ
C 19	47 P	56 P	56 P	82 P	39 P	220 PF	ジャンパ	ジャンパ
C 20	1 P	1 P	1 P	2 P	1 P	100 PF	68 PF	56 PF
C 22	47 P	56 P	56 P	82 P	39 P	1 PF	1 PF	1 PF
C 28	22 P	150 P	33 P	180 P	18 P	100 PF	68 PF	56 PF
C 31	18 P	120 P	"	"	18 P	82 PF	47 PF	33 PF
C 32	100 P	100 P	100 P	330 P	100 P	82 PF	47 PF	33 PF
C 66	33 P	150 P	47 P	180 P	22 P	82 PF	47 PF	33 PF
C 94	47 P	300 P	120 P	560 P	82 P	100 PF	100 PF	700 PF
C 103	33 P	150 P	33 P	180 P	18 P	82 PF	47 PF	47 PF
C 112	12 P	12 P	22 P	12 P	22 P	180 PF	120 PF	120 PF
C 129	472	N C	472	N C	472	82 PF	47 PF	22 PF *
C 131	10 P	15 P	10 P	15 P	10 P	22 PF	22 PF	22 PF
C 133	47 P	N C	N C	N C	82 P	472	472	472
C 135	39 P	220 P	82 P	330 P	68 P	15 PF	15 PF	10 PF
C 136	22 P	150 P	56 P	270 P	47 P	N C	N C	N C
C 138	39 P	220 P	100 P	470 P	82 P	20 PF	100 PF	82 PF
C 139	"	300 P	"	"	82 P	120 PF	100 PF	56 PF
C 140	4 P	33 P	12 P	56 P	10 P	150 PF	82 PF	100 PF
C 142	N C	22 P	N C	100 P	N C	33 PF	10 PF	12 PF
C 143	"	0.5 P	1 P	0.5 P	0.5 P	N C	N C	N C
C 144	"	N C	39 P	N C	22 P	0.5 PF	0.5 PF	1 PF
						68 PF	47 PF	39 PF
⑨	⑩に接続	⑩に接続	⑨に接続	⑩に接続	⑨に接続	⑤⑩に接続	⑤⑩に接続	⑤⑩に接続

2ch: 14.7245 MHz. { L15 2巻線C  
\* L16 "  
2ch: 12.09146 MHz